



Honda Gear Chart

(6.0 Gearbox Ratio)

Engine	/	Axle	Ratio
41	/	25	3.66
40	/	25	3.75
41	/	26	3.80
39	/	25	3.85
40	/	26	3.90
38	/	25	3.95
41	/	27	3.95
39	/	26	4.00
37	/	25	4.05
40	/	27	4.05
41	/	28	4.10
38	/	26	4.11
39	/	27	4.15
36	/	25	4.17
40	/	28	4.20
37	/	26	4.22
41	/	29	4.24
38	/	27	4.26
39	/	28	4.31
40	/	29	4.35
36	/	26	4.33

Engine	/	Axle	Ratio
37	/	27	4.38
41	/	30	4.39
38	/	28	4.42
39	/	29	4.46
36	/	27	4.50
40	/	30	4.50
37	/	28	4.54
41	/	31	4.54
38	/	29	4.58
39	/	30	4.62
40	/	31	4.65
36	/	28	4.67
37	/	29	4.70
38	/	30	4.74
39	/	31	4.77
36	/	29	4.83
37	/	30	4.86
38	/	31	4.89
36	/	30	5.00
37	/	31	5.03
36	/	31	5.17

Engine Gears

36, 37, 38, 39, 40, 41

Axle Gears

26, 27, 28, 29, 30, 31